



## Getting Started

**Power On** - Insert the battery (AAA) into the pager. If the battery is in, press and hold the **READ Key** for 2 seconds. The pager will display the **STANDBY SCREEN**. After a short time, the display screen will go blank to preserve battery power. Press any key to return to the **STANDBY SCREEN**.


03 MAR 2002  
1:29 AM FRI

**Power Off** - Go to the **STANDBY SCREEN**. Hold the **ESCAPE Key** for 2 seconds to display the **SETTINGS Menu**. Using the **Left** or **Right Keys**, scroll to the **Power Off** icon. Press the **READ Key** twice to confirm your choice.

**Backlight** - Press and hold the **READ Key** to activate or deactivate.


## Read Messages

The pager will display a new message when it is received. Each message is allocated a slot number (ie 01 , 02 , 03 etc). To read stored messages, press the **READ Key** from the **STANDBY SCREEN**. Scroll through messages with the **Left** or **Right Keys** and press the **READ Key** to confirm selection. You will be returned to the **STANDBY SCREEN** automatically if you scroll to the end of the message queue. If a message is longer than the screen width **▶**, use the **READ Key** to view the rest of the message.

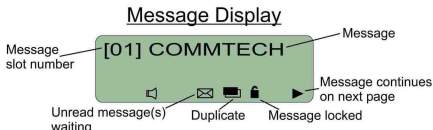

## Delete messages

Whilst message is displayed - Hold the **ESCAPE Key** for 2 seconds to view the **DELETE MENU Screen**. Using the **Left** and **Right Keys**, select between **LOCK** (locks current message), **DEL X** (delete current message) or **D.ALL** (delete all messages). Select **LOCK** (lock current message) to prevent the current message from being deleted. Press the **READ Key** to confirm selection. The **ESCAPE Key** takes you back to the **STANDBY SCREEN**.

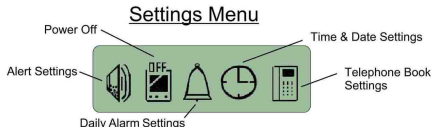

Hold the **ESCAPE Key** to select the **SETTINGS Menu**. Scroll through the menu using the **Left** or **Right Keys**. Press the **READ Key** to confirm your selection. Use the **Left** or **Right Keys** to modify options and the **READ Key** to proceed to the next option or to enter your changes. The **ESCAPE Key** takes you back to the **STANDBY SCREEN** without saving changes. **Note** : In the **TELEPHONE BOOK**, the **READ Key** must be pressed until it reaches the end of the **Name** field, before it will move along to the **Number** field.