
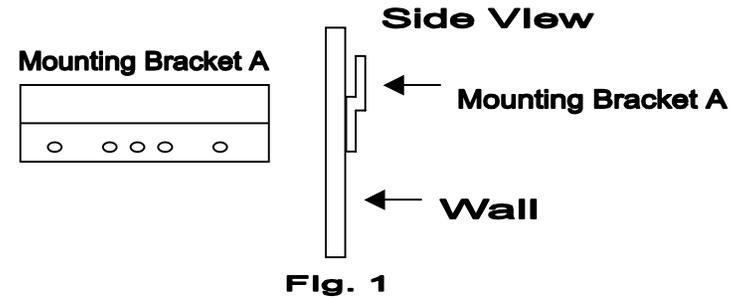


Wall Mount Option: CS2000 Bracket Mounitng Instructions

CS2000 Rearview

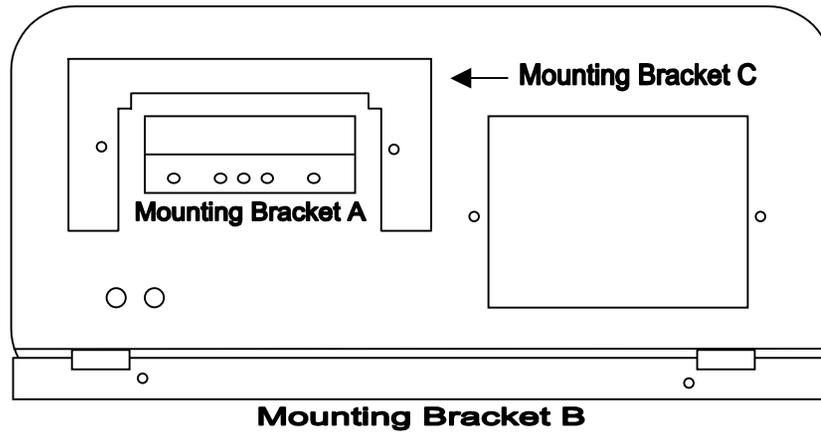

Mounting Instructions

1. Attach mounting bracket A to the wall as shown in Fig. 1
2. Slide the CS2000 unit so that mounting bracket C mates with bracket A.
3. Mount bracket B to the wall (as shown in Fig.2) just underneath the CS2000 unit such that the unit sits on the mounting bracket.

Notes:

1. Hardware supplied by Varitronics.
2. Make sure that the CS2000 units are mounted square.
3. Suggested receptacle: clock receptacle placed behind CS2000 unit.

